



※If the fuel tank is located higher than the carb, fuel liquid might flow to the carb even when engine is stopped. So please stop the fuel flow by using a clip, clamp or cock.