




LOSI[®] NO PREP DRAG CAR

CARBON FIBER WHEELIE BAR

Step 1

- 1 5x8x2.5mm x4
- 2 M3x10mm x10
- 3 M3x20mm x2
- 4 M3x30mm x4
- 5 Bearing Insert x2
- 6 15.4mm Spacer x4
- 7 59mm Spacer x6
- 8 Aluminum Turnbuckle/Shock Mount x1
- 9 Carbon Fiber Wheelie Bar Plate x2
- 10 O-Ring x2
- 11 Wheel x2

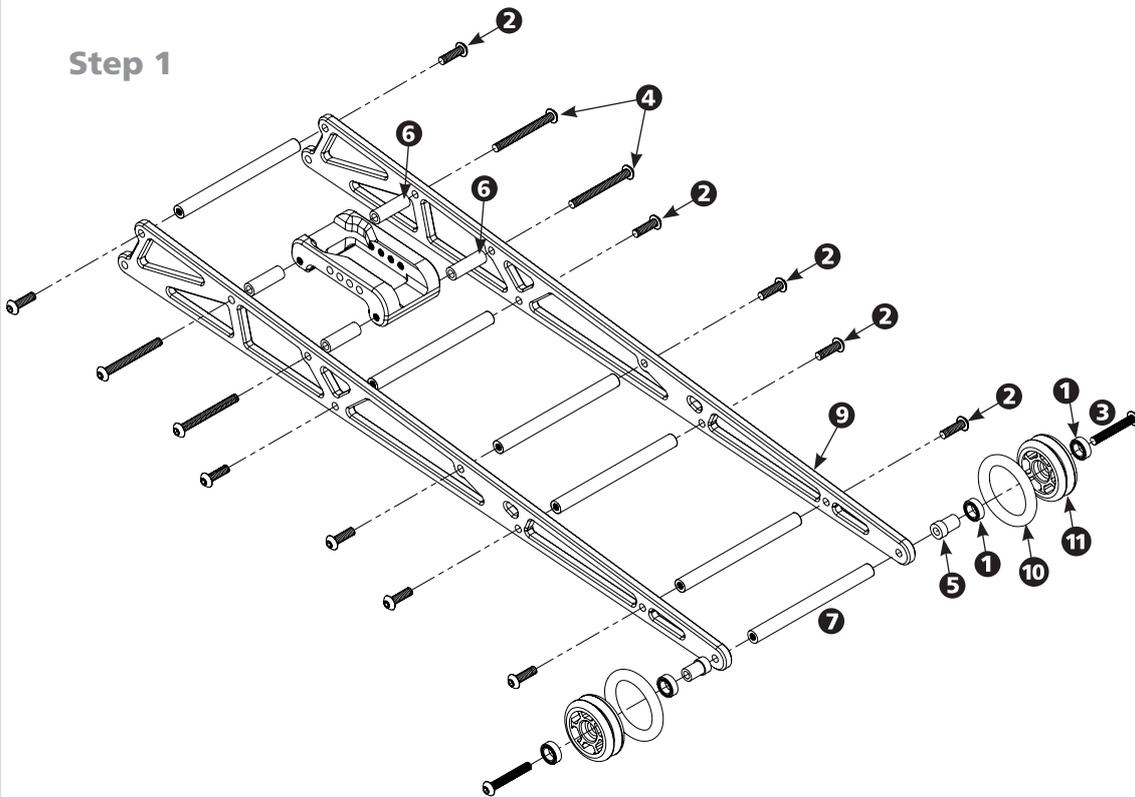



LOSI[®] NO PREP DRAG CAR

CARBON FIBER WHEELIE BAR

- 1 M3x5mm x2
- 2 M2.5x10mm x4
- 3 M3x20mm x1
- 4 M3x30mm x1
- 5 M3x50mm x1
- 6 M3 x2
- 7 15.4mm Spacer x2
- 8 Optional Spacer for Shock Mount x4
- 9 M3x73mm x1
- 10 Wheelie Bar Support Brace x1
- Optional TLR 5.0 Rear Shock (TLR233064) (Not Included) x1

Step 2

